

Sensei Tilt Lock & Turn

Operating Instructions


1 To lock the window - with the lever in the 0° position turn the key to lock the window sash in the closed position.



0° Position

Window Closed
(with option to lock)

2 To tilt the window - insert the key and turn it to unlock the handle. Push the button and rotate the lever to the 90° 'tilt' position. The button will pop out to confirm it is in position. With the lever at 90° the window can be tilted open (but not turned).

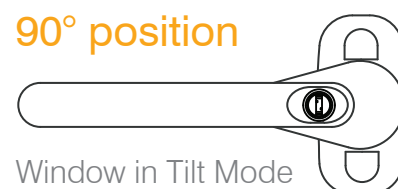

90° position

Window in Tilt Mode
(key required to
change to Turn mode)

3 To open the window fully - make sure the window sash is closed and rotate the lever to the 90° 'tilt' position. Insert the key in to the lock and turn it to the locked position. Now rotate the lever to the 180° position. The window can now be fully opened.



180° Position

Window in Turn mode

To close the window, close the window sash and rotate the lever back to the 0° position. Until the lever is returned to the 0° position the window can still be tilted or turned.

Safety Tip:

For the handle to remain a safety device it is recommended that the key is not stored in the window handle lock.

